 




2012
QUICK REFERENCE GUIDE



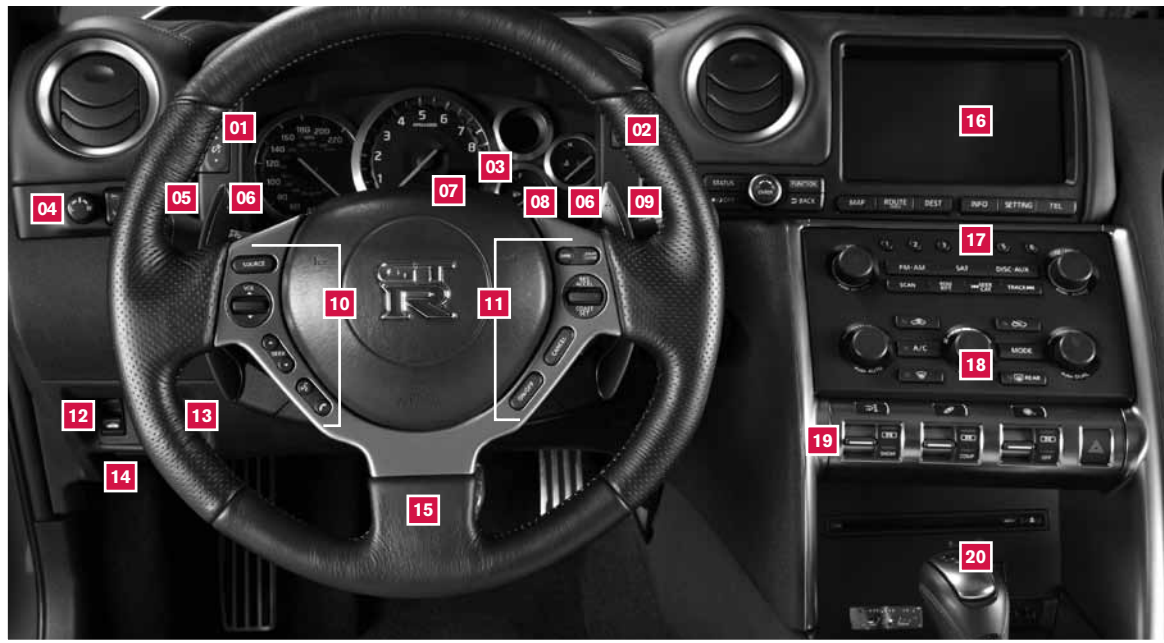

01 INSTRUMENT BRIGHTNESS CONTROL*

02 NEXT / ENTER SWITCHES*

03 TRIP COMPUTER*

04 OUTSIDE MIRROR CONTROL SWITCH

05 HEADLIGHT AND TURN SIGNAL CONTROL

06 PADDLE SHIFTERS*

07 VEHICLE INFORMATION DISPLAY*

08 LOW TIRE PRESSURE WARNING LIGHT

09 WINDSHIELD WIPER / WASHER SWITCH

10 STEERING WHEEL SWITCHES FOR AUDIO CONTROL / BLUETOOTH*

11 CRUISE CONTROL

12 TRUNK RELEASE

13 INTELLIGENT KEY PORT*

14 HOOD RELEASE*

15 STEERING WHEEL TILT AND TELESCOPIC ADJUSTMENT*

16 MULTI FUNCTION DISPLAY

17 AUDIO SYSTEM

18 AUTOMATIC CLIMATE CONTROLS

19 VDC, TRANSMISSION AND SUSPENSION SETUP SWITCHES*

20 FRONT PASSENGER AIR BAG STATUS LIGHT*

*See your Owner's Manual for more information.

NEW SYSTEM FEATURES

USB/iPod® Interface 2
 DVD Entertainment System 2
 XM NavTraffic® and XM NavWeather™ (if so equipped) 2

ESSENTIAL INFORMATION

Fuel-Filler Cap 3
 Tire Pressure Monitoring System (TPMS) 3
 Unique Noises 4
 Vehicle Modifications 4
 Vehicle Dynamic Control (VDC) 4

FIRST DRIVE FEATURES

NISSAN Intelligent Key™ System 5
 Seat Adjustments 5
 Outside Mirror Control Switch 6
 Starting/Stopping the Engine 6
 Headlight Control Switch 7
 Windshield Wiper Switch 7
 Automatic Climate Controls 7
 FM/AM/XM® Radio with CD/DVD Player 8
 Parking Brake 8
 Trunk Lid Release 8
 Fuel-Filler Door 9

SYSTEM GUIDE

Cruise Control 10
 Bluetooth® Hands-free Phone System 10
 Navigation System 10
 HomeLink® Universal Transceiver 11



- Always wear your seat belt.
- Supplemental air bags do not replace proper seat belt usage.
- Children 12 and under should always ride in the rear seat properly secured in child restraints or seat belts according to their age and weight.
- Do not drink and drive.

For more information, refer to the **“Safety -- Seats, seat belts and supplemental restraint system (section 1)”** of your Owner’s Manual.



Additional Information about your vehicle is also available in your Owner’s Manual, Multi Function Display Owner’s Manual and at www.nissanusa.com.

This easy-to-use Quick Reference Guide is intended to help you more fully appreciate some of the unique features and functions of your new vehicle. However, it is not intended to replace your Owner’s Manual. The Owner’s Manual contains more detailed information to help you better understand the important safety warnings, features, operation and maintenance of your vehicle. All information, specifications, photographs and illustrations in this publication are those in effect at the time of printing. NISSAN reserves the right to change specifications or design without notice and without obligation.

new system features

USB/IPOD® INTERFACE

- When a compatible USB memory device or iPod® is plugged into the USB jack, compatible audio or video files stored on the device can be played through the vehicle's audio system.
- The device can be operated using the vehicle's audio system, the touch screen or the steering wheel controls while connected to the vehicle.

For more information, refer to the **"Audio system (section 3)"** of your Multi Function Display Owner's Manual.



DVD ENTERTAINMENT SYSTEM

- With this Entertainment System, you can play video files via a DVD or CD on the control panel.
- To view movies on the control panel, stop the vehicle in a safe location, move the shift lever to the P (PARK) position and apply the parking brake.
- To reduce driver distraction, movies will not be shown on the front display while the vehicle is in any drive position.

For more information, refer to the **"Audio system (section 3)"** of your Multi Function Display Owner's Manual.



XM NAVTRAFFIC®** AND XM NAVWEATHER™** (if so equipped)

- Your vehicle's Navigation System is equipped with XM NavTraffic® and XM NavWeather™ capabilities.
- XM NavTraffic enables your vehicle's Navigation System to display real-time traffic conditions, such as accidents or road construction and may provide a detour to help avoid congestion.
- XM NavWeather tracks nationwide weather information, provides real-time weather reports and automatically alerts you to severe weather conditions around the current vehicle location.

*XM® Satellite Radio, NavTraffic and NavWeather are only available on vehicles equipped with optional XM® Satellite subscription service.

For more information, refer to the **"Navigation (section 2)"** of your Multi Function Display Owner's Manual.



FUEL-FILLER CAP

- To tighten, turn the fuel-filler cap clockwise until ratcheting clicks are heard. If the cap is not fully tightened, the Malfunction Indicator Light (MIL) **SERVICE ENGINE SOON** may illuminate.
- If the **SERVICE ENGINE SOON** light illuminates because the fuel-filler cap is loose or missing, tighten or reinstall the cap. The **SERVICE ENGINE SOON** light should turn off after a few driving trips.

For more information, refer to the **“Instruments and controls (section 2)”** and the **“Pre-driving checks and adjustments (section 3)”** of your Owner’s Manual.



TIRE PRESSURE MONITORING SYSTEM (TPMS)

- A LOW TIRE PRESSURE warning message will appear in the vehicle information display **01** and the TPMS light will illuminate when one or more tires are low on pressure and air is needed.
- After tire pressures are adjusted, drive the vehicle at speeds above 16 MPH (25km/h) and the warning and indicator light will disappear.
- When the low tire pressure warning light flashes for approximately 1 minute and then remains on, the TPMS is not functioning properly. Have the system checked by a NISSAN dealer.
- Tire pressure rises and falls depending on the heat caused by the vehicle’s operation and the outside temperature. Low outside temperature can lower the temperature of the air inside the tire, which can cause a lower tire inflation pressure. This may cause the low tire pressure warning light to illuminate. If the warning light illuminates in low ambient temperature, check the tire pressure in all four tires.



For more information, refer to the **“Instruments and controls (section 2)”** and the **“Starting and driving (section 5)”** of your Owner’s Manual.

UNIQUE NOISES

- The GT-R is a high-performance vehicle and therefore has unique operating characteristics.
- You will hear more noises emitted from this vehicle than from a conventional passenger car.

For more information, refer to the **“GT-R Overview (section GTR)”** and the **“Starting and driving (section 5)”** of your Owner’s Manual.

VEHICLE MODIFICATIONS

- Do not modify the vehicle with aftermarket parts or accessories.
- To maintain your vehicle’s performance, only use genuine GT-R specific components.

For more information, refer to the **“GT-R Overview (section GTR)”** of your Owner’s Manual.

VEHICLE DYNAMIC CONTROL (VDC)

- Always make sure the VDC is ON before driving the vehicle.
- The VDC OFF mode should ONLY be used briefly to help free the vehicle if stuck in snow or mud.

For more information, refer to the **“GT-R Overview (section GTR)”**, the **“Instruments and controls (section 2)”** and the **“Starting and driving (section 5)”** of your Owner’s Manual.

NISSAN INTELLIGENT KEY™ SYSTEM

The NISSAN Intelligent Key™ System allows you to lock or unlock your vehicle, open your trunk and start the engine.

- To lock or unlock a door, push the door handle request switch **01** once.
- Push the door handle request switch **01** within 1 minute of unlocking the door and the other door will unlock.

NOTE: It is important to make sure the Intelligent Key is with you (that is, in your pocket or purse).

For more information, refer to the “Pre-driving checks and adjustments (section 3)” of your Owner’s Manual.

 


SEAT ADJUSTMENTS

- Push the control switch **01** forward or backward to slide the seat forward or backward.
- Rotate the knob **01**, forward or backward to adjust the angle of the seatback.

SEAT LIFTER (driver’s seat)

- To raise or lower the rear portion of the seat, move the control switch **01** up or down.
- To raise or lower the front portion of the seat, push the top or bottom of the switch **02**.

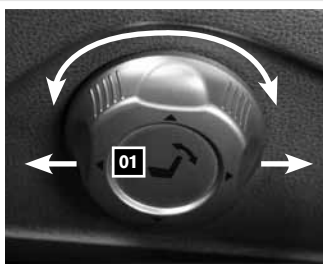


REAR SEAT ENTRY

- Lift up the lever **03** and tilt the driver’s seatback forward.





 first drive features

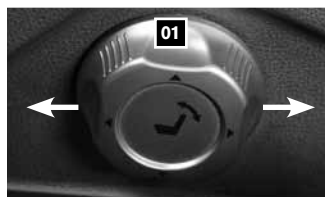
- Push the seat adjustment control switch **01** forward to the desired position.
- To return the seat to its original position, tilt the seatback rearward and push the seat adjustment control switch **01** backward or forward.



For more information, refer to the “**Safety — Seats, seat belts and supplemental restraint system (section 1)**” of your Owner’s Manual.

OUTSIDE MIRROR CONTROL SWITCH

 - Turn the control switch **01** right or left to select the right or left side mirror.
- Move the control switch **01** up, down, right or left to adjust the mirror angle.
- Push the switch **02** to the  position to fold the outside rearview mirrors and push the switch **02** to the  position to unfold the outside rearview mirrors.

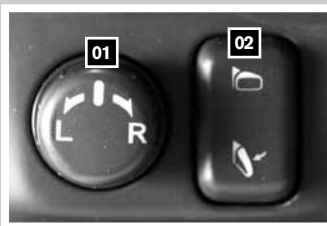

For more information, refer to the “**Pre-driving checks and adjustments (section 3)**” of your Owner’s Manual.

STARTING/STOPPING THE ENGINE

- Depress the brake pedal.
- Press the ignition switch **START/STOP** button to start the engine.

NOTE: It is important to make sure the NISSAN Intelligent Key™ is with you (that is, in your pocket or purse).



TURNING THE ENGINE OFF

- Move the shift lever to the P (PARK) position and apply the parking brake.
- Press the ignition switch **START/STOP** button to turn the engine off.

 

EMERGENCY ENGINE SHUT OFF

To shut off the engine in an emergency situation while driving, perform one of the following procedures:


- Rapidly push the push-button ignition switch 3 consecutive times, or
- Push and hold the push-button ignition switch for more than 2 seconds.

For more information, refer to the “**Starting and driving (section 5)**” of your Owner’s Manual.

HEADLIGHT CONTROL SWITCH

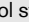
- Turn the headlight control switch **01** to the  position to turn on the clearance, side marker, tail, license plate and instrument panel lights.
- Turn the switch **01** to the  position to turn on the headlights.

 For more information, refer to the “**Instruments and controls (section 2)**” of your Owner’s Manual.

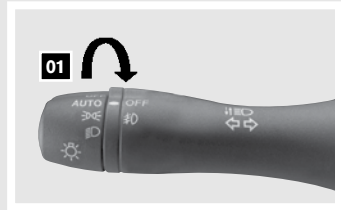

WINDSHIELD WIPER SWITCH

 - Move the lever to the following positions to operate the windshield wipers:
 - 01** Mist (**MIST**) - One sweep operation of the wipers.
 - 02** Intermittent (**INT**) - Speed-sensing wipers operate intermittently.
 - 03** Low (**LO**) - Wipers operate at a continuous low-speed.
 - 04** High (**HI**) - Wipers operate at a continuous high-speed.

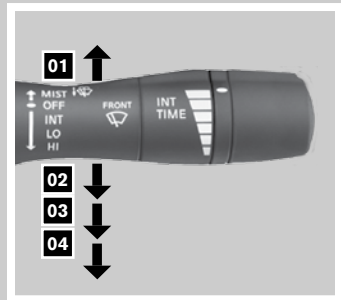

For more information, refer to the “**Instruments and controls (section 2)**” of your Owner’s Manual.




AUTOMATIC CLIMATE CONTROLS

01 AUTO BUTTON/TEMPERATURE CONTROL KNOB

Press the **AUTO** button to turn the system on and the fan speed, air flow distribution and temperature will be automatically maintained. Turn the driver’s side temperature control knob left for cooler air or right for warmer air.

02 DEFROSTING/DEFOGGING FRONT AND SIDE WINDOWS

Press the front defroster control button  to turn the system on or off.

03 DEFROSTING REAR WINDOW AND OUTSIDE HEATED MIRRORS

Push the rear window defroster switch  REAR to turn the system on or off.

For more information, refer to the “**Heater and air conditioner (section 5)**” of your Multi Function Display Owner’s Manual.

first drive features



FM/AM/XM^{®*} RADIO WITH CD/DVD PLAYER

01 ON-OFF VOLUME CONTROL KNOB

Press the knob to turn the system on or off. Rotate the knob right or left to increase or decrease the volume.

02 TUNE/FOLDER/AUDIO CONTROL KNOB

To manually tune the radio, rotate the **TUNE/FOLDER/AUDIO** knob left or right.

 
*XM[®] Satellite Radio is only available on vehicles equipped with optional XM[®] Satellite subscription service.

For more information, refer to the **"Audio system (section 3)"** of your Multi Function Display Owner's Manual.

PARKING BRAKE


- To apply, pull the parking brake lever **01** up.
- To release, firmly press the foot brake while slightly pulling up on the parking brake lever. Press the button **02** and lower the lever completely.

For more information, refer to the **"Starting and driving (section 5)"** of your Owner's Manual.

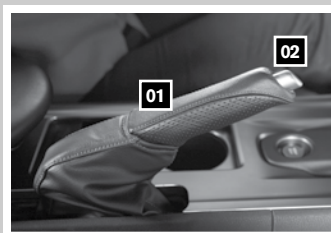

TRUNK LID RELEASE

Use one of the following methods to unlatch the trunk, then raise the trunk lid to open:

- Push the trunk open request switch **01** under the trunk handle.
- Press the trunk button  on the NISSAN Intelligent Key[™] for more than one second.
- From inside the vehicle, push down on the trunk lid release switch **02**.

 
For more information, refer to the **"Pre-driving checks and adjustments (section 3)"** of your Owner's Manual.



FUEL-FILLER DOOR

The fuel-filler door is located on the right, rear side of the vehicle.

- When the doors of the vehicle are locked or unlocked, the fuel-filler door is automatically locked or unlocked at the same time.
- Push one of the power door lock switches to unlock the fuel-filler door from inside the vehicle or push the door handle request switch to unlock the fuel-filler door from outside the vehicle.
- To open the fuel-filler door, press the left side of the door to release the door lock and pull the door open.

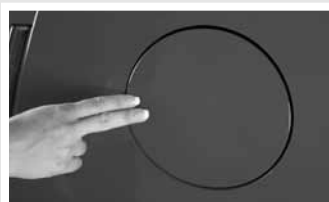

For more information, refer to the “**Pre-driving checks and adjustments (section 3)**” of your Owner’s Manual.

system guide

CRUISE CONTROL

- The cruise control system enables you to set a constant cruising speed.
- The system will automatically maintain the set speed until you tap the brake pedal, accelerate, cancel or turn off the system.

For more information, refer to the **“Starting and driving (section 5)”** of your Owner’s Manual.



BLUETOOTH® HANDS-FREE PHONE SYSTEM

- With an overhead microphone and sound transmitted through the audio system speakers, the Bluetooth® Hands-free Phone System utilizes Bluetooth wireless technology and voice recognition to provide hands-free cellular phone communication.

For more information, refer to the **“Bluetooth® Hands-free Phone System (section 4)”** of your Multi Function Display Owner’s Manual or please visit www.nissanusa.com/bluetooth.



NAVIGATION SYSTEM

- Your Navigation System can calculate a route from the current location to a preferred destination. The real-time map display and turn-by-turn voice guidance will lead you along the route.
- The Navigation System will continually update your vehicle’s position. If you have deviated from the original route, it will recalculate the route from your current location.
- The Navigation System can also provide you with important data, such as; distance to empty, your tire rotation schedule and other maintenance interval reminders.

For more information, refer to the **“Navigation (section 2)”** of your Multi Function Display Owner’s Manual.



HOMELINK® UNIVERSAL TRANSCEIVER

- The HomeLink® System can learn and consolidate the functions of up to three different hand-held transmitters, operating items such as; garage doors, property gates, outdoor and indoor lights or alarm systems.

For more information, refer to the **"Instruments and controls (section 2)"** of your Owner's Manual, the HomeLink® website at www.homelink.com or call 1-800-355-3515.

memo

Nissan, the Nissan Brand Symbol, "SHIFT_" tagline,
Z and Nissan model names are Nissan trademarks.
© 2010 Nissan North America, Inc.
QR2E 0R35U0
Printing: December 2010 (04)

